

TEAC

CRX25UBT BT FM Clock Radio



USER MANUAL

IMPORTANT!

WARRANTY INFORMATION INSIDE. PLEASE READ

Trademark of TEAC Corporation JAPAN

www.teac.com.au

TEAC WARRANTY PROCEDURE v1.7b: July 2016 for 12M Replacement

Please read the owner's manual carefully and ensure that you have followed the correct installation and operating procedures.

1. Please read this warranty card.
2. Keep your purchase receipt to enable you to proceed quickly in the event of a Warranty Service.
3. If you require Warranty Service, please contact the TEAC Warranty Service Hotline at 1300 553 315 for assistance. Please ensure that you have the model number, serial number and purchase receipt ready when you call.

Please complete the section below and keep this information for your own records.

Owner's Name	_____
Owner's Address	_____
Postcode	_____
Model Name/No.	Serial No.
_____	_____
Dealer's Name	_____
Dealer's Address	_____
Postcode	_____

Thank you for selecting a TEAC product
If your TEAC product malfunctions, please call us directly for warranty support between Monday to Friday at 8.30AM – 5PM AEST at the

TEAC Warranty Service Hotline
1300 553 315

For other enquiries, please contact us at:
www.teac.com.au

When calling to receive warranty service, please have:

1. Your model and serial number
2. Proof of purchase
3. And your product in front of you

NOTE:


- You are required to provide a copy of your proof of purchase in order to have your claim processed.
- Please read the Terms and Conditions for details of your warranty entitlement.

TEAC TERMS AND CONDITIONS v1.7b: July 2016 for 12M Replacement

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

1. TEAC warrants that this product is free from defects in material and workmanship under normal domestic use with reasonable care and skill. Maintenance and cleaning (i.e. laser head) is not covered by this warranty. The TEAC warranty only applies to TEAC products purchased NEW from a TEAC Authorised Retailer in Australia. This warranty only applies to the original purchaser and cannot be transferred.
2. The benefits to the consumer given by this Warranty are in addition to other rights and remedies of the consumer under a law in relation to goods or services to which the warranty relates, being the Australian Consumer Law.
3. Refund or replacement via your TEAC Authorised Retailer is available for a period of 14 days after purchase for goods that have been inspected and determined to have a major failure. Refund and exchange is not applicable for change of mind.
4. Subject to the terms herein, this warranty effectively covers TEAC products under the **12 Month Replacement Warranty Scheme**, 12 months from the date of original purchase.
5. The warranty is void and warranty claims may be refused, subject to the Australian Consumer Law, if:
 - a) The product was not transported, installed, operated or maintained according to manufacturer instruction, or
 - b) The product was abused, damaged, tampered, altered or repaired by any unauthorised persons, or
 - c) Product failure is due to accidents during use, installation or transit, power surges, use of defective or incompatible external devices, exposure to abnormal conditions such as excessive temperatures or humidity, or entry of liquids, objects or creatures into the product, cockroach infestations, or
 - d) The customer is unable to provide proof of purchase of the product for verification, or
 - e) The serial number of the product is missing or has been tampered with.
6. No one is authorised to assume any liability on behalf of TEAC or impose any obligation on it, in connection with the sale of any equipment other than as stated in this warranty and outlined above.
7. TEAC and/or its Authorised Service Centres reserve the right to inspect and verify whether the product is exhibiting a major failure as claimed by customers/retailers.

LOCATION AND DESCRIPTION OF CONTROLS

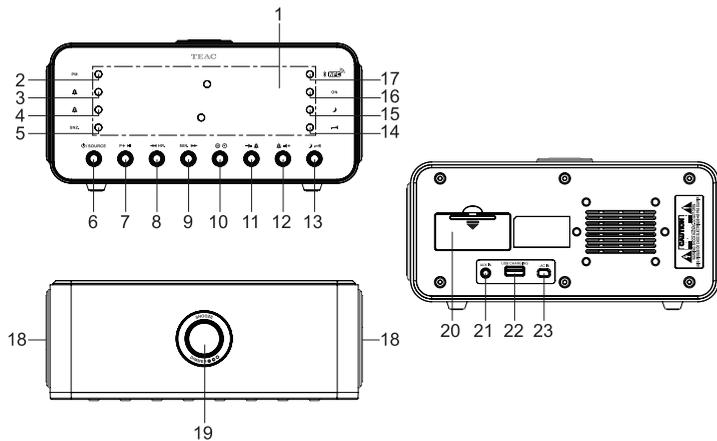

1. LED display
2. PM indicator
3. Alarm 1 indicator
4. Alarm 2 indicator
5. SNZ. Snooze indicator
6. Power button: To turn unit on-off
SOURCE: To select FM, AUX or BLUETOOTH mode
7. P+ : Preset up
Play/Pause
Setting down
HR: Hour setting
MIN: Minute setting
Setting up
8. Memorization
Setting the clock
9. Volume down
Alarm 1
Alarm 2
Volume up
10. Set Nap or Sleep function
Sleep indicator
Nap indicator
ON indicator
BT wireless streaming indicator
NFC Tag
11. Speakers
12. SNOOZE: Interval alarm repetition
DIMMER: Dimmer light intensity of the screen
13. Battery compartment
14. AUX IN jack (3.5mm)
15. USB CHARGING: USB port for charging
16. AC power cord

POWER SUPPLY

AC: 100-240V ~ 50/60Hz

DC: 2x1.5V, battery type AAA/R03/UM4 (not included) for back up.

For optimal performance, Alkaline batteries are recommended. These batteries must be replaced every six months.

1. Insert the plug of power cord into a standard wall outlet.
2. Insert 2xAAA batteries into the battery compartment. Follow the polarity symbols indicated, as improper usage can cause damage to the device. Do not attempt to recharge the batteries, they can catch fire or explode.

In order to avoid leakage, always remove the batteries when the unit is not being used for an extended period of time. Do not mix different types of batteries or old batteries with new ones.

Backup System: All settings are memorized, however, the clock time may occasionally need to be readjusted. In case of power failure, if backup batteries are not installed, the screen will flash to indicate this power failure and the need to re-set your original settings.

TURNING ON / OFF THE UNIT

In standby mode, press Power button once to turn on the unit, the on indicator lights up. Press and hold Power button for 2 seconds to turn off the unit.

SELECTING FUNCTION

When the unit is ON, press **SOURCE** button repeatedly to select the desired mode: FM, BT streaming (*bt*), AUX (*AUX*).

LISTENING TO THE RADIO

When the unit is on, press **SOURCE** button repeatedly to select FM mode. The display will show current frequency for a few seconds and change to clock time.

MANUAL SEARCH

1. When the unit is on, Press **SOURCE** to select FM mode.
2. Choose your radio station with **Left** or **Right**.
3. Adjust the volume by pressing **Right** or **Left** to the desired level.
4. For best reception, extend the FM wire antenna.
5. To stop listening to the radio, press and hold Power button to turn the unit off.

Automatic search

Press and hold **Left** or **Right** for a few seconds to automatically scan for stations. A station with a weak signal can be set manually by repeatedly pressing **Left** or **Right**.
NOTE: During the search operation, the sound level is automatically muted.

Preset stations

This unit can store 20 FM stations.

Manual storage

1. Select a radio station manually or in automatic search.
2. Press **Memorization** "P 01" blinks on the screen.
3. Press **Left** or **Right** to select a channel.
4. Press **Memorization** to save it.
5. Repeat steps 1-4 to store other stations.

Automatic storage

In FM mode, press and hold **P+** for few seconds and the unit will automatically save the first 20 FM stations. When you store on a channel that has already been preset, the previous station will be cleared and replaced by the new station.

Listening to station presets

Press **P+** and repeat the operation as many times as necessary to select your station. Press **Right** or **Left** to adjust the sound level.

CONNECTING AUXILIARY SOURCE

1. Connect your auxiliary source (e .g. mp3 player) to the **AUX IN** jack on the back of the unit (cable not included).
2. Press **SOURCE** button on unit repeatedly to select **AUX** mode. The display will show “**RU**” for a few seconds and change to clock time.
3. Start playback from your auxiliary source.
4. Adjust the volume to desired level.
5. To stop playback, disconnect your auxiliary source from the **AUX IN** jack.

BT WIRELESS STREAMING FUNCTION

Pairing a BT Device

1. When the unit is ON, Press **SOURCE** button repeatedly to select BT wireless streaming mode. The display will show “**bE**” for a few seconds and change to clock time. The indicator  will start to blink indicating it is in pairing mode.
2. On the paired device, enable Bluetooth and select “TEAC CRX25UBT” from the Device List. If the paired device prompts for a pass code, use “0000”. Some devices will ask you to accept the connection. You will hear an indication sound when pairing is successful. The BT streaming indicator  stops blinking and remains lit.

Tip: If you want to connect your wireless speaker to another wireless audio device, you need to disconnect the current device first and follow the steps above to make a new connection.

- On some devices such as computers, once paired you must select the unit from the Bluetooth menu and choose “Use as Audio Device (stereo)” or similar.
- Pairing remains intact when the unit and/or your smart device is taken out of communication range. An active connection will be re-established when your device returns within range.
- When the unit is turned on again, it will automatically try to reconnect with the most recently paired device.

Using a Wireless Streaming Device

1. With a unit paired, operate your device and its sound will be heard through the CRX25UBT clock radio speakers.
2. Press the  button to pause playback. Press again to resume playback.
3. Select desired track with  / .
4. Adjust the volume using the  /  + Volume buttons. You can also adjust the volume on the device to which you are paired.

Using an NFC Device

NFC (Near Field Communication) is a technology that enables short-range wireless communication between NFC-enabled devices, such as mobile phones.

1. When the unit is ON, Press **SOURCE** button repeatedly to select BT streaming mode. The display will show “**bE**” for a few seconds and change to clock time. The BT streaming indicator  will start to blink indicating it is in pairing mode.

TECHNICAL SPECIFICATIONS

POWER SUPPLY:

AC: 100-240V ~ 50/60Hz, 13W

DC: 3V  2x1.5V, Battery type, AAA/R03/UM4 (not included) for back up.

RADIO:

FM: 87.5-108 MHz

BLUETOOTH

Bluetooth Version: V2.1 with EDR

Frequency range: 2.4-2.80 GHz

Transmission power: 4 dBm

Working Distance: Up to 10 meters measured in open space (wall and structures may affect range of device)

Specifications are subject to change without notice.

2. Enable NFC and Bluetooth on your wireless device, tap the NFC device on the **NFC** tag  of this unit until you hear an indication sound from this unit. The NFC device is now wireless connected to your smart device.
 3. Select and play audio files or music on your NFC device.
 4. To break the connection, tap the NFC device with the **NFC** tag  on this unit again.
- Note: The operational range between the main unit and a NFC device is approximately 10 metres.

SETTING THE TIME

1. In standby mode, press and hold  button, the display will flash. Set the time with HR. hour and/ or MIN. minutes.
2. Press  again to confirm.

NOTE:

1. If the time is selected at PM, the PM indicator will light up.
2. If during the adjustment time no key is pressed in 9 seconds, the current display will be automatically stored.

SETTING THE ALARM AND THE ALARM MODE

1. In standby mode, press and hold  for a few seconds, the display will blink.
2. Press  and / or  to set the time of wake up.
3. Press  then press  or  to select the source of wake up: **b b** buzzer, **F** radio or **b E** Bluetooth.
4. Press  to confirm, the alarm 1  indicator l.

Note:

- The corresponding alarm indicator blinks when the alarm function is activated.
 - The previous level of listening is stored; the volume of the alarm will be identical. If you wake up with the radio OR Bluetooth, do not forget to check the volume level. Select your desired radio station before the unit is turned off.
 - When Bluetooth (**b E**) is the wake-up source, make sure your paired device (e.g. Smartphone) is the most recently paired Bluetooth device to the CRX25UBT clock radio, and the Bluetooth function is enabled on your device. When the alarm time is reached, the unit will automatically reconnect with your paired device and the audio will start to play automatically.
- * **Same procedure applies for alarm 2 with  button.**

Stopping the alarm

1 - Alarm repetition

Press **SNOOZE**. The alarm stops and will sound again 9 minutes later, the snooze indicator blinks during snooze time.

MORE INFORMATION



CAUTION: To reduce the risk of electric shock, do not open the device - there are no user serviceable parts inside. Refer all servicing to qualified personnel.



The lightning with the arrow symbol in the triangle is a warning sign alerting the user of "dangerous voltage" inside the unit.



The exclamation point in the triangle is a warning sign alerting the user of important instructions accompanying the product.

The caution mark is located at the back of the device.

IMPORTANT

- The Marking plate is located at the back of the device.
- Make sure to have a minimum distance of 5 cm around the unit for sufficient ventilation.
- Ensure that the ventilation openings are not covered with items such as newspapers, table cloths, curtains, etc.
- Do not place naked flame sources such as lit candles on or near the device.
- Do not expose the device to dripping or splashing water.
- Do not place objects filled with liquids, such as glass, vase on the device.
- Use the device only in moderate climates.
- Do not throw batteries into fire! Respect the environment when disposing of used batteries.
- Batteries should not be exposed to excessive heat such as sunshine, fire or other similar heat sources.
- The power plug is used as a disconnect device and must be easily accessible. To be completely disconnected from the power, the plug of the appliance should be disconnected completely. The socket must not be obstructed and should be easily accessible during intended use.
- Under the influence of fast transient and/or electrostatic electricity, the product may malfunction and the user must perform a power reset of the device.



If at any time in the future you should need to dispose of this product please note that Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice. (Waste Electrical and Electronic Equipment Directive)

2 - Alarm stop

Press  or  . The alarm1 will sound again the next day at the same time.

3 - Alarm Cancellation

In Standby mode, press  to cancel the alarm1 permanently. The alarm1  indicator lights off.

Note: Same procedure applies for Alarm2 with  button.

SLEEP FUNCTION

Press  to select 120, 90, 60, 30, 15 or 5 minutes of listening. The  indicator will light up. The unit will automatically turn off after the specified time. To cancel the sleep function, repeatedly press  button until “OFF” is displayed, or Long press  button until the unit is turned off.

NAP FUNCTION

This function wakes you up after a short period of time. Only the buzzer may be selected.

1. In standby mode, press  to select 120, 90, 60, 30, 15 or 5 minutes for your nap. The indicator lights nap.
2. To stop the alarm, press  or .
3. To cancel the function, press  repeatedly until OFF is displayed.

DIMMER

Press **SNOOZE / DIMMER** to select the brightness of the screen: high, low, or off.

USB CHARGING

This unit is equipped with a built-in USB charging port (Output: 5V  1A) for recharging your mobile device (e.g. Smartphone, tablet, etc.)

Simply plug the USB charging cable (not included) into the USB charging port and connect it to your mobile device.

TEAC

In the event of a product failure within the warranty period, please call the

TEAC Warranty Service Hotline

1300 553 315

Between Monday to Friday - 8.30AM to 5PM AEST

*Please have your purchase receipt and the product's serial number ready

For other enquiries and support please visit
www.teac.com.au