

TEAC

CD Player AM/FM Radio

PCD260



 
USER MANUAL

IMPORTANT !

WARRANTY INFORMATION INSIDE. PLEASE READ

Trademark of TEAC Corporation JAPAN

www.teac.com.au



TEAC[®] WARRANTY PROCEDURE v1.7b: July 2016 for 12M Replacement

Please read the owner's manual carefully and ensure that you have followed the correct installation and operating procedures.

1. Please read this warranty card.
2. Keep your purchase receipt to enable you to proceed quickly in the event of a Warranty Service.
3. If you require Warranty Service, please contact the TEAC Warranty Service Hotline at 1300 553 315 for assistance. Please ensure that you have the model number, serial number and purchase receipt ready when you call.

Please complete the section below and keep this information for your own records.

Owner's Name _____

Owner's Address _____

Postcode _____

Model Name/No. _____ Serial No. _____

Dealer's Name _____

Dealer's Address _____

Postcode _____

Thank you for selecting a TEAC product
If your TEAC product malfunctions, please call us directly for warranty support between Monday to Friday at 8.30AM – 5PM AEST at the

TEAC Warranty Service Hotline
1300 553 315

For other enquiries, please contact us at:
www.teac.com.au

When calling to receive warranty service, please have:

1. **Your model and serial number**
2. **Proof of purchase**
3. **And your product in front of you**

 
NOTE:

- You are required to provide a copy of your proof of purchase in order to have your claim processed.
- Please read the Terms and Conditions for details of your warranty entitlement.

TEAC[®] TERMS AND CONDITIONS v1.7b: July 2016 for 12M Replacement

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

1. TEAC warrants that this product is free from defects in material and workmanship under normal domestic use with reasonable care and skill. Maintenance and cleaning (i.e. laser head) is not covered by this warranty. The TEAC warranty only applies to TEAC products purchased NEW from a TEAC Authorised Retailer in Australia. This warranty only applies to the original purchaser and cannot be transferred.
2. The benefits to the consumer given by this Warranty are in addition to other rights and remedies of the consumer under a law in relation to goods or services to which the warranty relates, being the Australian Consumer Law.
3. Refund or replacement via your TEAC Authorised Retailer is available for a period of 14 days after purchase for goods that have been inspected and determined to have a major failure. Refund and exchange is not applicable for change of mind.
4. Subject to the terms herein, this warranty effectively covers TEAC products under the **12 Month Replacement Warranty Scheme**, 12 months from the date of original purchase.
5. The warranty is void and warranty claims may be refused, subject to the Australian Consumer Law, if:
 - a) The product was not transported, installed, operated or maintained according to manufacturer instruction, or
 - b) The product was abused, damaged, tampered, altered or repaired by any unauthorised persons, or
 - c) Product failure is due to accidents during use, installation or transit, power surges, use of defective or incompatible external devices, exposure to abnormal conditions such as excessive temperatures or humidity, or entry of liquids, objects or creatures into the product, cockroach infestations, or
 - d) The customer is unable to provide proof of purchase of the product for verification, or
 - e) The serial number of the product is missing or has been tampered with.
6. No one is authorised to assume any liability on behalf of TEAC or impose any obligation on it, in connection with the sale of any equipment other than as stated in this warranty and outlined above.
7. TEAC and/or its Authorised Service Centres reserve the right to inspect and verify whether the product is exhibiting a major failure as claimed by customers/retailers.



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN

CAUTION: To reduce the risk of electric shock, do not remove the cover (or back). There are no user serviceable parts inside the unit. Refer all servicing to qualify personnel.



The lightning flash with arrowhead symbol within the triangle is a warning sign alerting the user of "dangerous voltage" inside the unit.



The exclamation point within the triangle is a warning sign alerting the user of important instructions accompanying the product.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CAUTION: Invisible laser radiation when open and interlocks defeated. Avoid exposure to beam. Class 1 laser product.



CLASS 1 LASER PRODUCT
APPAREIL À LASER DE CLASSE 1
PRODUCTO LASER DE CLASE 1
PRODUTO LASER CLASSE 1


IMPORTANT!

- Batteries should not be exposed to excessive heat such as sunshine, fire or the like.
- Please consider the environment when disposing of batteries.
- Do not cover the ventilation openings with items such as newspapers, table-cloths, curtains, etc.
- No naked flame sources, such as lighted candles, should be placed on the device.
- Only use the device in moderate climates.
- The apparatus should not be exposed to dripping or splashing.
- Ensure a minimum distance of 5cm around the apparatus for sufficient ventilation.
- Do not place objects filled with liquids, such as vases, on the device.
- The marking plate is located on the back of unit.
- Mains plug is used as the disconnect device and it should remain readily operable. To completely disconnect the power input, the mains plug of the device should be disconnected from the mains completely. The mains plug should not be obstructed and should be easily accessed during intended use.
- Due to electrical fast transient or/and electrostatic phenomenon, the product may malfunction and require a power reset.
- Excessive sound pressure from earphones and headphones can cause hearing loss.



If at any time in the future you should need to dispose of this product please note that Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

GENERAL CONTROLS

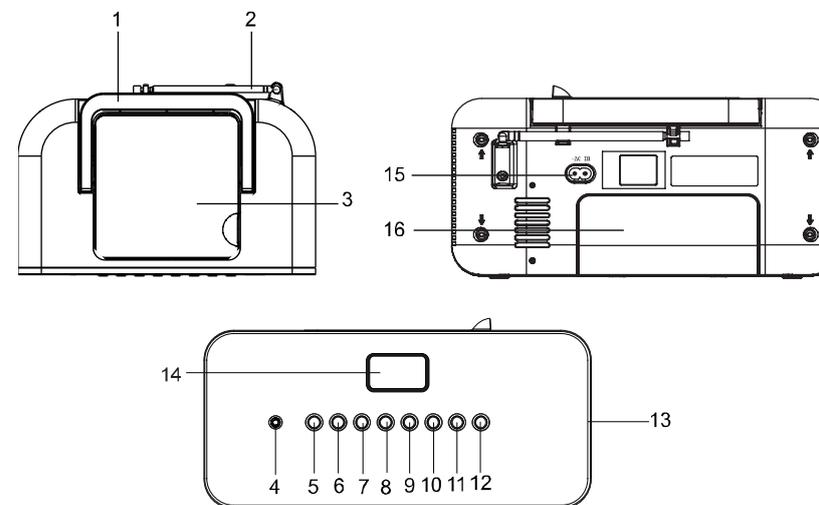

- | | |
|--|--|
| 1. HANDLE | 8. M ■ MEMORY M / STOP ■ |
| 2. FM TELESCOPIC ANTENNA | 9. ⏮ SKIP-/TUNE- BUTTON |
| 3. CD COMPARTMENT | 10. ⏭ SKIP+/TUNE+ BUTTON |
| 4. AUX.IN: AUXILIARY INPUT | 11. ⏪ VOLUME- DOWN |
| 5. ⏻ SOURCE POWER ON-OFF/SOURCE: FM, AM, CD, AUX IN | 12. ⏩ VOLUME+ UP |
| 6. ⏮ PROGRAM / RADIO PRESET STATIONS ⏭ / REPEAT ⏪ | 13. SPEAKER |
| 7. ⏸ PLAY / PAUSE | 14. LCD DISPLAY |
| | 15. AC INPUT SOCKET (~ AC IN) |
| | 16. BATTERY & AC CORD COMPARTMENT |

POWER SUPPLY

This unit operates on AC (240V ~ 50Hz) or DC (9V) 6 x 1.5V Type UM-2 /R 14 / "C" (Batteries not included)

AC OPERATION:

- Connect the AC Power Cord to your AC household mains outlet and switch on the mains supply. Make sure the voltage is compatible.
- Disconnect the power cord from the mains when not in use.

NOTE: In a concern of saving energy, when playback has reached the end or listening volume is set at a very low level and no control is operated on the device for a period of 10 minutes, the unit will automatically switch to Standby mode.

BATTERY OPERATION

Open the battery compartment at the rear of the unit and insert 6 batteries, observing the polarity diagram indicated inside the compartment, and close the compartment. To switch from AC power to battery power, disconnect the AC power cord.

Battery Replacement

Batteries should be replaced when the volume decreases or the sound distorts.

Notes on batteries

- Do not mix batteries of different types or new batteries with used batteries.
- The batteries cannot be exposed to excessive heat such as sunshine, fire or the like.
- Please respect the environment when disposing of used batteries.
- To prevent leakage, always remove the batteries from the device when it is not used for an extended period.

AUDIO CONTROLS

Press  to turn the unit on. When the unit is on, press  again to select your listening source: **FM, AM, CD, AUX IN**.

LISTENING TO THE RADIO

MANUAL SEARCH

1. Press  to select FM or AM.
2. Press repeatedly  or  to find your station.
3. Adjust the sound level with  or .

FOR OPTIMAL RADIO RECEPTION:

FM: Extend and position the telescopic antenna.

AM: Rotate the unit horizontally.

AUTOMATIC SEARCH

Press  to select FM or AM.

Press and Hold on  or  for about 2 seconds to start the search. The automatic search function locates stations whose signal is strong. Press again  or  to continue the search.

Note:

Stations with weak signals can be searched manually.

The sound is automatically muted during search.

RADIO PRESET STATIONS

1. Select a station manually or automatically with  or .
2. Press once , "P01" blinks on the display for a few seconds.
3. Press  or  to select a preset number.
4. Press  again to store the radio station on the selected memory number.
5. Repeat steps 1-4 to store other stations.

Note: When you store a station in a memory number already occupied, the existing station is automatically erased.

LISTENING TO PRESET STATIONS

Press  button to select a preset station.

LISTENING TO DISC

1. Press  button to turn on the unit.
2. Open the CD door.
3. Place the CD with label side up inside the CD compartment and close the CD door.
4. Press  button to select CD function.
5. After a few seconds, the total number of tracks and "CD" icon will appear on the display.

To:

- Read your CD: Press once 
- Pause Playback: Press again 
- Resume playback: Press again 
- Permanently stop playback: Press  
- Search forward or backward: Press and hold  or 
- To skip to the next or previous track: press  or 

DISK ERROR

Note: If the disc is dirty, damaged or unreadable, or if the disc is placed upside down, "NO" will appear on the display. If this occurs, clean the disc, insert the disc correctly or try another disc.

If you encounter CD playback problem, either of the following ways may help:

1. Turn off the unit. Disconnect the AC power cord from AC outlet and reconnect it again.
2. Clean your CD disc.

REPEAT PLAYBACK

Repeatedly press   to select one of the following playback modes. Track Repeat an Repeat All.

TO DISABLE THE REPEAT PLAYBACK

Press   repeatedly until the repeat mode indicator disappears from the display. The repeat function is automatically canceled at the opening of the door of the CD or the shutdown of the unit.

PROGRAM PLAYBACK

1. Insert the disc with the label facing up, into the compartment and close the CD door.
2. Press  .
3. Press  .
4. Select the desired track with  or  then press   to save the program in memory.
5. Repeat step 4 until the end of your programming.
6. Press  to start playback. This PROGRAM function is automatically canceled when opening the CD door or shutdown of the unit.

Note:

CD up to 20 programs.

AUXILIARY INPUT (AUX. IN)

1. Plug one end of cable (not included) into the LINE IN jack of the unit. 
2. Plug the other end of the cable into the Headphone or Line Out jack of the external source.
3. Press the  button to select Auxiliary mode. The auxiliary icon "AUX" is displayed.
Operate your external auxiliary source as usual.
4. Adjust the volume to desired level.
5. To stop playback, disconnect your auxiliary source from the LINE IN jack.

MAINTENANCE

CLEANING

WARNING: Disconnect the unit from the mains supply before cleaning.

- Use a soft, dry, clean cloth. Regularly dust the vents at the back or sides.
- Using solvents, abrasive or alcohol-based products risks damaging the appliance.
- If an object or liquid enters inside the appliance, unplug it immediately and have it checked by an authorized engineer.

Notes on discs

- * Do not use irregular shape CDs (example: heart-shaped, octagonal ones). It may result in malfunctions.
- * Do not place more than one disc in the disc compartment.
- * Do not try to open the disc compartment during playback.
- * Do not touch the lens. Doing so may cause malfunction.
- * If there is a scratch, dirt or fingerprints on the disc, it may cause playback error. Before playing, clean the disc with a cleaning cloth. Wipe the disc from the center out. Don't store discs in places with high temperatures or high humidity, they can become warped. After playing, store the disc in its case.

Important Note

- Before transporting the unit, remove the disc from the disc compartment.

SPECIFICATIONS

POWER SUPPLY: AC: 240V ~ 50Hz
DC: 9V  (UM-2 1.5V x 6)

POWER CONSUMPTION: 14 W

OUTPUT POWER: 2 x 1 Watt RMS

GROSS WEIGHT: 1.9kg
NET WEIGHT: 1.5kg
DIMENSIONS: 26 x 12 x 16.5cm

RADIO

FREQUENCY RANGE

FM: 87.5 - 108 MHz
AM: 522 - 1620 kHz

TEAC

In the event of a product failure within the warranty period, please call the

TEAC Warranty Service Hotline

1300 553 315

Between Monday to Friday - 8.30AM to 5PM AEST

*Please have your purchase receipt and the product's serial number ready

For other enquiries and support please visit
www.teac.com.au