

TEAC

PR130 2 BAND POCKET RADIO PLL



USER MANUAL

IMPORTANT !

WARRANTY INFORMATION INSIDE. PLEASE READ

Trademark of TEAC Corporation JAPAN

www.teac.com.au

TEAC WARRANTY PROCEDURE v1.7b: July 2016 for 12M Replacement

Please read the owner's manual carefully and ensure that you have followed the correct installation and operating procedures.

1. Please read this warranty card.
2. Keep your purchase receipt to enable you to proceed quickly in the event of a Warranty Service.
3. If you require Warranty Service, please contact the TEAC Warranty Service Hotline at 1300 553 315 for assistance. Please ensure that you have the model number, serial number and purchase receipt ready when you call.

Please complete the section below and keep this information for your own records.

Owner's Name _____

Owner's Address _____

Postcode _____

Model Name/No. _____ Serial No. _____

Dealer's Name _____

Dealer's Address _____

Postcode _____

Thank you for selecting a TEAC product
If your TEAC product malfunctions, please call us directly for warranty support between Monday to Friday at 8.30AM – 5PM AEST at the

TEAC Warranty Service Hotline
1300 553 315

For other enquiries, please contact us at:
www.teac.com.au

When calling to receive warranty service, please have:

1. Your model and serial number
2. Proof of purchase
3. And your product in front of you

NOTE:


- You are required to provide a copy of your proof of purchase in order to have your claim processed.
- Please read the Terms and Conditions for details of your warranty entitlement.

TEAC TERMS AND CONDITIONS v1.7b: July 2016 for 12M Replacement

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

1. TEAC warrants that this product is free from defects in material and workmanship under normal domestic use with reasonable care and skill. Maintenance and cleaning (i.e. laser head) is not covered by this warranty. The TEAC warranty only applies to TEAC products purchased NEW from a TEAC Authorised Retailer in Australia. This warranty only applies to the original purchaser and cannot be transferred.
2. The benefits to the consumer given by this Warranty are in addition to other rights and remedies of the consumer under a law in relation to goods or services to which the warranty relates, being the Australian Consumer Law.
3. Refund or replacement via your TEAC Authorised Retailer is available for a period of 14 days after purchase for goods that have been inspected and determined to have a major failure. Refund and exchange is not applicable for change of mind.
4. Subject to the terms herein, this warranty effectively covers TEAC products under the **12 Month Replacement Warranty Scheme**, 12 months from the date of original purchase.
5. The warranty is void and warranty claims may be refused, subject to the Australian Consumer Law, if:
 - a) The product was not transported, installed, operated or maintained according to manufacturer instruction, or
 - b) The product was abused, damaged, tampered, altered or repaired by any unauthorised persons, or
 - c) Product failure is due to accidents during use, installation or transit, power surges, use of defective or incompatible external devices, exposure to abnormal conditions such as excessive temperatures or humidity, or entry of liquids, objects or creatures into the product, cockroach infestations, or
 - d) The customer is unable to provide proof of purchase of the product for verification, or
 - e) The serial number of the product is missing or has been tampered with.
6. No one is authorised to assume any liability on behalf of TEAC or impose any obligation on it, in connection with the sale of any equipment other than as stated in this warranty and outlined above.
7. TEAC and/or its Authorised Service Centres reserve the right to inspect and verify whether the product is exhibiting a major failure as claimed by customers/retailers.

LOCATION AND DESCRIPTION OF CONTROLS

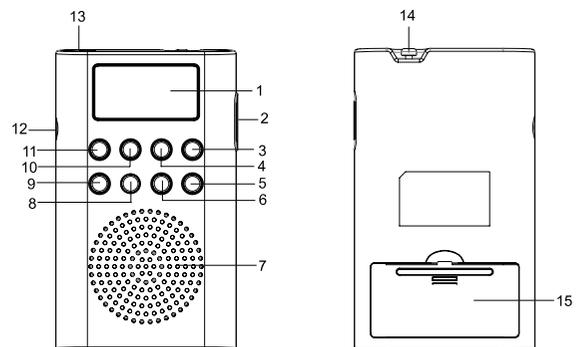

1. LCD display
2. <=> / >=> Tuning/ setting
3. <+ Volume UP
4. -> Volume down
5. M+ Preset up
6. -M Preset down
7. Speaker
8. M Memorization
⊙ Setting the clock
9. St./Mo.: Stereo/Mono selection
⊙ key lock
10. B Band selection (AM/FM)
⊙ Alarm / (Snooze)
11. ⏻ To turn unit ON/OFF
⊙ Sleep
12. DC IN 3V jack
13. Phones jack
14. Telescopic antenna
15. Battery compartment

POWER SUPPLY

Choose one of the power sources as below.

- AC adapter (not included): Output DC 3V \equiv 300mA
- Batteries (not included): DC 3V \equiv 2x1.5V R03/ UM-4/AAA

Connecting power

Connect an AC adapter (not supplied) to the DC IN 3V jack of the unit and to the mains socket.

Caution!

- Check that the voltage marked on the adapter rating plate matches your local supply.
- Never use an AC adaptor that is damaged, route power lead in a safe manner and make sure it is not subjected to trapping or pinching. If the power lead is damaged refer to a qualified service agent.
- The AC adaptor is used as the disconnect device and it shall remain readily operable. To be completely disconnected from the power input, the AC adaptor shall be disconnected from the mains completely. The AC adaptor should not be obstructed and should be easily accessible during intended use.

Note:

- The AC adaptor must be unplugged from the power outlet for the unit to run on the batteries.
- When the set is connected to the mains, the power source automatically switches to AC.

Battery operation

1. Remove the lid of the battery compartment.

- Insert 2 R03/ UM-4/AAA batteries into the compartment. Make sure to match their polarities (+/-) to the markings inside the compartment.
- Put the lid back in place.

Notes on batteries (not supplied)

- Do not mix different types of batteries or old batteries with new ones.
- Never recharge the batteries, apply heat to them or take them apart.
- Batteries should not be exposed to excessive heat such as sunshine, fire or the like.
- Do not throw the batteries in fire!
- Attention should be drawn to the environmental aspects of battery disposal.
- The batteries need to be replaced when: The volume decreases, or sound is distorted, or the display is hardly visible.
- In order to avoid leakage, remove the batteries when the unit will not be used for a long period of time.
- Please respect the environment. Before throwing any batteries away, consult your distributor who may be able to take them back for specific recycling.

CAUTION:

Danger of explosion if batteries are incorrectly replaced. Replace only with the same or equivalent type.

SETTING THE TIME

The clock time can only be set when the unit is turned OFF.

Before setting the time, make sure the alarm function is OFF by checking if the alarm icon  appears on LCD display or not. If the icon appears, press  button to turn off the alarm icon.

After the batteries are installed, the display will show "00:00".

- Press  once to enter the time setting mode. The display will show flashing "24 Hr" or "12Hr". Then press  /  to select 24Hr or 12Hr time format.
- Press  again to confirm and the hour digits flash.
- Press  /  to set the hour value. Press  to confirm and minute digits flash.
- Press  /  to set the minute value and press  again to confirm.

NOTE:

- If during the adjustment time no key is activated in 5 seconds, the current display will be automatically stored.
- If the time format is 12 Hr, make sure the hour is set so that the PM indicator is displayed correctly for afternoon time.

TURNING UNIT ON/OFF

In standby mode, press  once to turn on unit. Radio frequency will be shown on display. Press  again to turn off the unit. "OFF" appears on display for one second, then clock time will be displayed.

LISTENING TO THE RADIO

Selecting band

When the unit is ON, press  repeatedly to select FM or AM mode. The corresponding indicator appears on display.

FM Stereo / Mono selection (FM only)

In FM mode, press **St./Mo.** button to select STEREO or MONO mode. "ST." is displayed on LCD in STEREO mode.

2. Alarm stop

When the buzzer sounds, press  to turn off the alarm. The alarm will sound again the next day at the same time.

3. Alarm Cancellation

In Standby mode, press  to cancel the alarm permanently. The alarm icon  disappears from the display.

Wake to the radio and snooze function

Note:

- The previous level of listening is stored, the volume of the alarm will be identical. If you wake up with the radio, do not forget to check the volume level.
- Press  once to turn on the unit. Adjust the volume with  or . Then press  to turn off the unit.
- If you use the sleep mode with low sound level, you should use the buzzer to wake you up.

1. Alarm repetition (snooze)

When waking to the radio the alarm icon  will blink; press  once to stop the alarm, which will then sound again 9 minutes later. The alarm icon  blinks during the snooze time. Press  button again to stop the ALARM. The alarm will sound again the next day at the same time.

2. Alarm stop

Press  once or press  twice. The alarm will sound again the next day at the same time.

3. Alarm Cancellation

In Standby mode, press  to cancel the alarm permanently. The alarm icon  disappears from the display.

Note: If the radio is already turned on before the alarm time is reached, the radio will keep the current volume with the alarm icon  blinking when the alarm time is reached, and the radio will turn off automatically after 60 minutes.

SLEEP FUNCTION

In standby mode, long press  until "SLEEP" and "90" will appear on the display. Then press  repeatedly to select 90-80-70-60-50-40-30-20 or 10 minutes of listening. Release the button and the radio will be turned ON automatically. The SLEEP icon remains ON. The unit will automatically turn off after the specified time. To cancel the sleep function, press  button to turn off the radio. SLEEP indicator will disappear from the display.

KEY LOCK FUNCTION

Press and hold  button until  icon appears on display. This deactivates all buttons' functions and eliminates the possibility of accidentally pressing buttons.

To cancel the key lock function, press and hold the  button until  icon disappears on display.

USING HEADPHONE (NOT INCLUDED)

Connect headphones with the volume set low and increase if required. When headphones/earphones are connected, no sound will be emitted from the unit's speaker.



To prevent possible hearing damage, do not listen at high volume levels for long periods. Maximum output voltage ≤ 150mV

Manual search

- Choose your radio station with  or .
- Adjust the volume by  or  to the desired level.
- To stop listening to the radio, press  to turn off the unit.

Automatic search

Press and hold  or  for few seconds. The automatic search locates strong stations. A station with a weak signal can be set manually by repeatedly pressing  or .

NOTE: During the search operation, the sound level is automatically muted.

To enhance radio reception ability:

- FM: Extend the telescopic antenna.
- AM: Rotate the unit horizontally for optimum reception.

Preset stations

This unit can store 20 FM and 20 AM stations.

* Manual storage:

- Select a radio station manually or in automatic search.
- Press : "X PRESET" blinks on the display. (X stands for 0~19)
- When "PRESET" is blinking, press  or  to select a channel.
- Press  to save it.
- Repeat steps 1-4 to store other stations.

* Automatic storage:

Press and hold  button for 5 seconds. "SCAN" icon blinks on display. The unit will automatically start to scan and store the first 20 searched FM stations or first 20 searched AM stations into the memory location. When you store on a channel that has already been preset, the previous station will be cleared and replaced by the new station.

Note: If less than 20 stations can be searched, then the unused memory location number will be available for storing any desired stations by manual storage procedure.

* Listen to station presets

- Press  or  to select your preset station.
- Press  or  to adjust sound level.

SETTING THE ALARM

Alarm can be set only when the unit is OFF and alarm icon  appears on display. If the alarm icon is not ON, press  button. The alarm mode is turned ON when alarm icon  is displayed.

- Press  button. The alarm icon  appears on display.
- Press  button, the hour digits and alarm icon  will blink.
- Press  /  to set the hour value. Press  to confirm and minute digits flash.
- Press  /  to set the minute value and press  again to confirm.
- Press  or  to select the source of wake up: **buzzer** or **radio**.
- Press  to confirm your setting.

Wake to buzzer and snooze function

****When the radio is already turned ON before the alarm time is reached, the buzzer will still sound when the alarm time is reached and the radio will be stopped automatically.**

1. Alarm repetition (snooze)

Press  once, the buzzer sound will stop and the alarm icon  blinks during snooze period. The buzzer will sound again in 9 minutes. Press  button again to stop the buzzer sound. Press  button one more time to cancel snooze function and the alarm icon  stops blinking. The alarm will sound again the next day at the same time.

TECHNICAL SPECIFICATIONS

POWER SUPPLY:

- AC adapter (not included): Output DC 3V  300mA
- Batteries (not included): DC 3V  2x1.5V R03/ UM-4/AAA

RADIO:

FM: 87.5-108MHz
AM: 522-1620kHz

Design and specifications are subject to change without notice.

MORE INFORMATION



CAUTION: To reduce the risk of electric shock, do not open the device, there is no party inside for the user. Refer all servicing to qualified personnel.



The lightning with the arrow symbol in the triangle is a warning sign alerting the user to "dangerous voltage" inside the unit.



The exclamation point in the triangle is a warning sign alerting the user of important instructions.

IMPORTANT

- The Marking plate is located at the back of the device.
- Make sure to have a minimum distance of 5 cm around the unit for sufficient ventilation.
- Ensure that the ventilation openings is not covered with items such as newspapers, tablecloths, curtains, etc.
- Do not place naked flame sources, such as lit candles on the apparatus.
- Do not expose this appliance to dripping or splashing water.
- Do not place objects filled with liquids, such as glass, vase on the device.
- Use the apparatus only in moderate climates.
- Under the influence of fast transient and / or electrostatic electric phenomenon, the product may malfunction and the user must perform a power reset of the device.



If at any time in the future you should need to dispose of this product please note that Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.